ARAT Telephone mount

Type: Chrysler
PT Cruiser

Part No: 1304

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

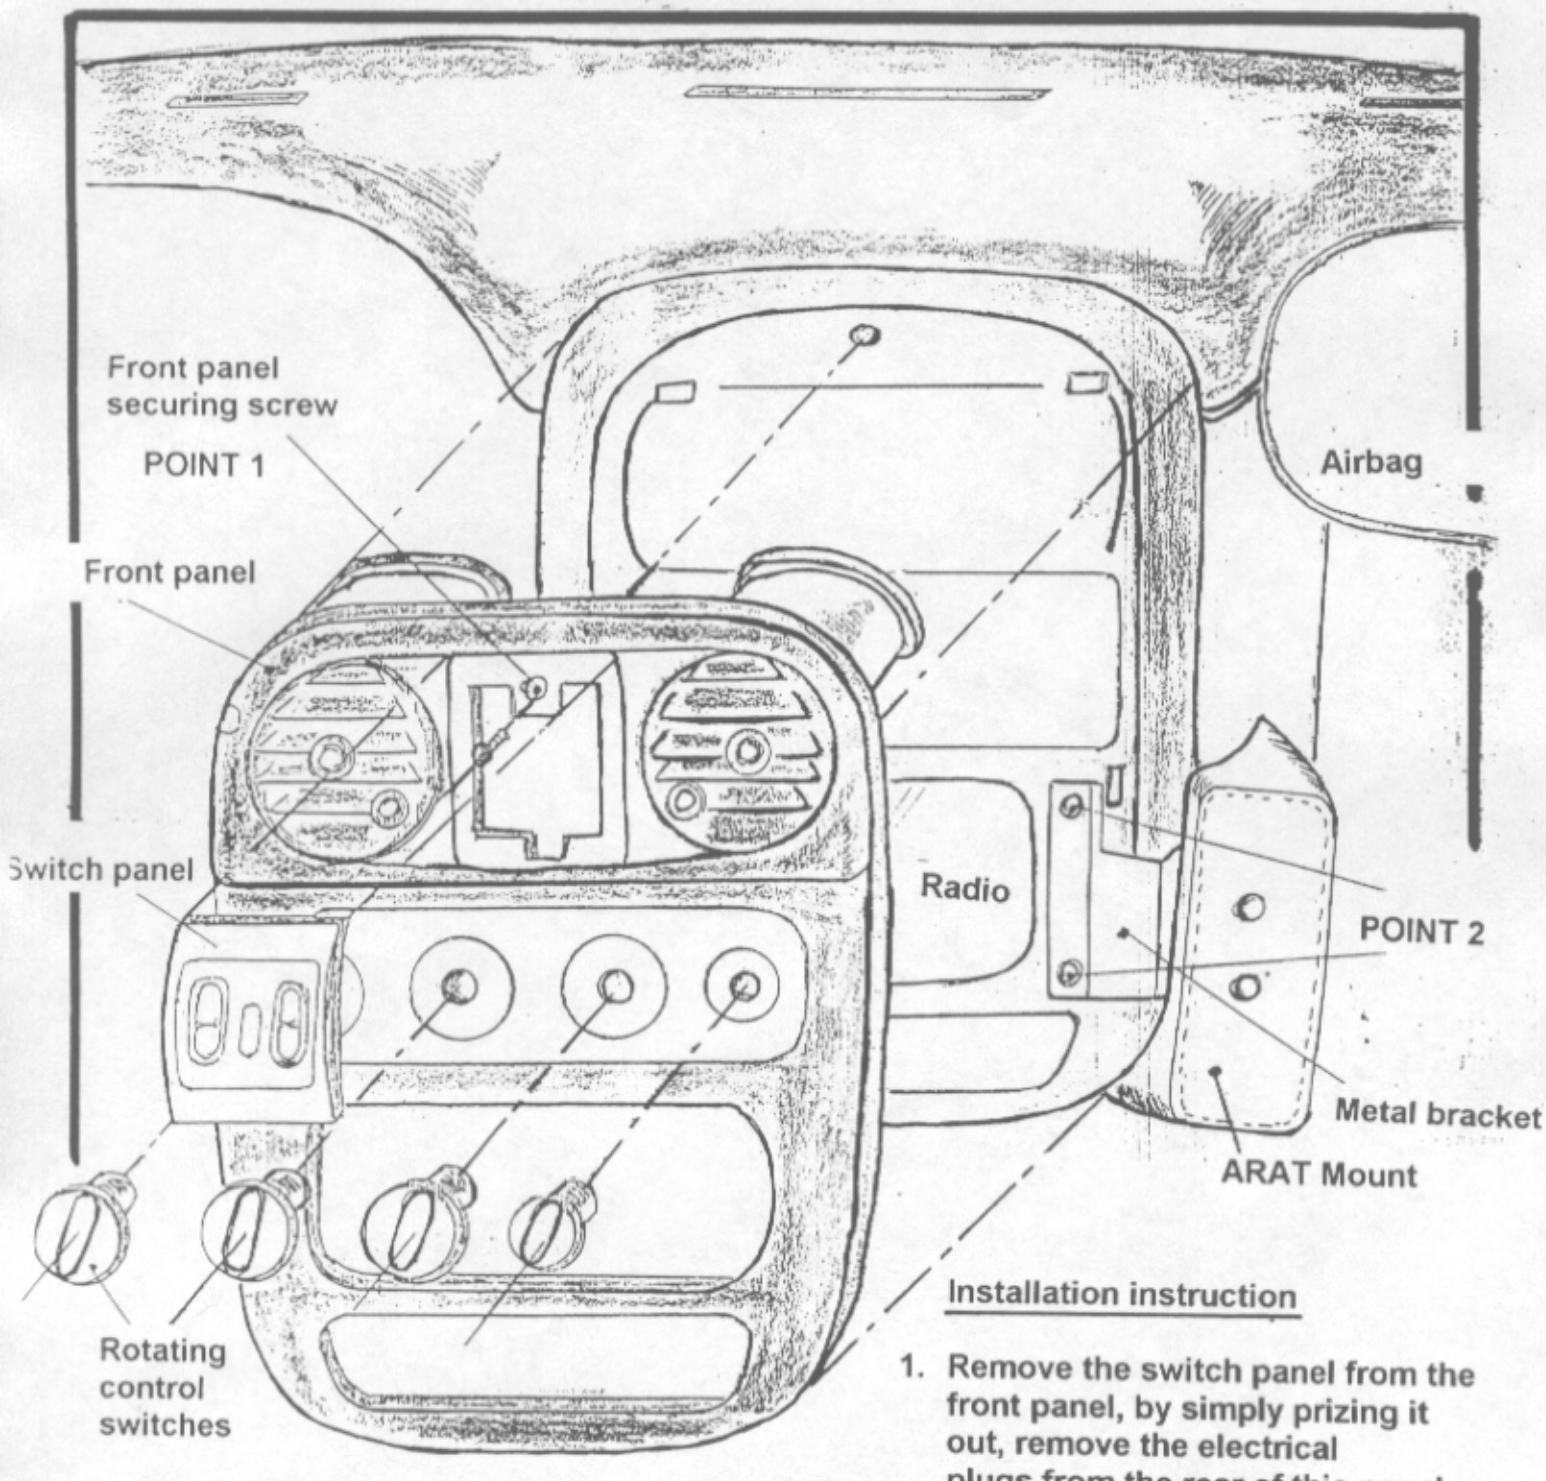

Installation instruction

1. Remove the switch panel from the front panel, by simply prizing it out, remove the electrical plugs from the rear of this panel
2. Remove the panel securing screw at POINT 1, pull off the rotating control switches, and remove the front panel from its spring clips
3. Remove both screws at POINT 2, and place the ARAT mount to the contours of the dashboard, and secure the mount by replacing the previously removed screws, through the metal bracket of the ARAT mount
4. Replace the front panel and rotating switches in reverse order